


SHARP®

SPC483 / SPC222 LCD Digital Alarm Clock

Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.

Controls

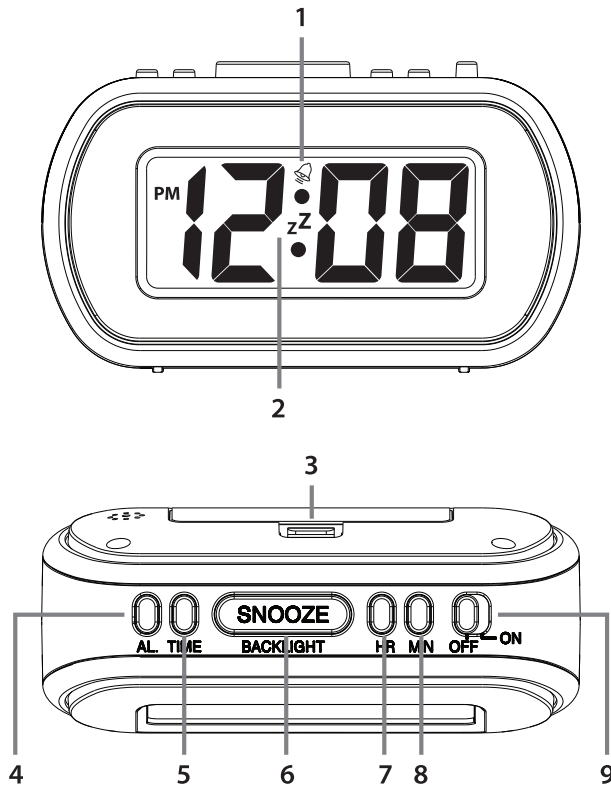

- | | |
|---------------------|----------------------------|
| 1. ALARM INDICATOR | 6. SNOOZE/BACKLIGHT BUTTON |
| 2. SNOOZE INDICATOR | 7. HOUR BUTTON |
| 3. BATTERY DOOR | 8. MINUTE BUTTON |
| 4. ALARM BUTTON | 9. ALARM ON/OFF BUTTON |
| 5. TIME BUTTON | |

Power Supply

- This clock operates on two "AAA" batteries (not included). Remove the **BATTERY DOOR** and insert two new "AAA" batteries in the direction of the polarity symbols. Please make sure the batteries are new and inserted correctly.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, ect) batteries.

To Set The Time

- Press and hold the **TIME** button down to activate time setting.
- While holding down the **TIME** button, press the **HOUR** button to advance to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- While holding down the **TIME** button, press the **MIN** button to advance to the correct minute.
- Release the **TIME** button when the correct time is shown on the display.

To Setting The Alarm

- Press and hold the **ALARM** button down to activate alarm setting.
- While holding down the **ALARM** button, press the **HOUR** button to advance to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- While the holding down the **ALARM** button, press the **MINUTE** button to advance to the correct minute.
- Release the **ALARM** button when the correct alarm time is shown on the display.

Using The Alarm

- Slide the **ALARM ON/OFF** switch to the ON position. On the front of the clock the alarm indicator "☞" will be lit.
- Slide the **ALARM ON/OFF** switch to the OFF position to deactivate the alarm. The alarm indicator "☞" will no longer be visible.

To Use The Snooze Feature

- Press the **SNOOZE/LIGHT** button after the wake-up alarm sounds will cause the alarm to stop and the alarm will sound again in five minutes. This will repeat each time the **SNOOZE/LIGHT** button is pressed. The snooze indicator "zZ" will flash to confirm snooze function is activated.

To Use The Backlight Feature

- Press the **SNOOZE/LIGHT** button to illuminate display backlight five seconds for your night viewing.

Care For Your Clock

- The batteries should be replaced if the display or alarm becomes weak or dysfunctional. Store the clock without batteries when not in use. A soft cloth or a paper towel may be used to clean your clock. Do not use any corrosive cleaner or chemical solution on the clock. Keep the clock clean and dry to avoid problems.

Battery Warning

- Clean the battery contacts and also those of the device prior to battery installation.
- Follow the polarity (+) & (-) to place battery.
- Don't mix old and new batteries.
- Don't mix Alkaline, Standard (Carbon-Zinc), or Rechargeable (Nickel-Cadmium) batteries.
- Incorrect battery placement will damage the clock movement and battery may leak.
- Exhausted battery is to be removed from the product.
- Remove batteries from equipment which is not to be used for an extended period of time.
- Don't dispose of batteries in fire. Batteries may explode or leak.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.