


SHARP®

SPC729 Bluetooth Clock Radio with USB Port

Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.

Controls

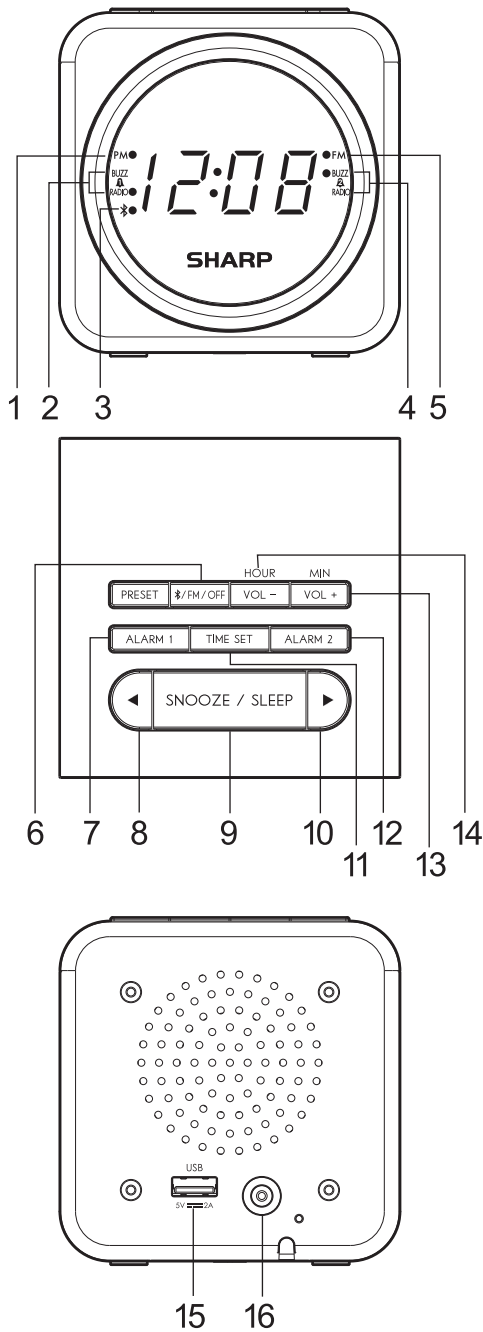

1. PM INDICATOR
2. ALARM 1 INDICATOR
3. BLUETOOTH INDICATOR
4. ALARM 2 INDICATOR
5. FM INDICATOR
6. */FM/OFF BUTTON
7. ALARM 1 BUTTON
8. TUNING < BUTTON
9. SNOOZE/SLEEP BUTTON
10. TUNING > BUTTON
11. TIME SET BUTTON
12. ALARM 2 BUTTON
13. MIN/VOL+ BUTTON
14. HOUR/VOL- BUTTON
15. USB CHARGING PORT
16. DC 5V JACK

Connecting To The Power Supply

- Begin by plugging in the AC adapter into a standard household outlet and the other end of the cord into the DC 5V jack at the back of the unit.

Installing Backup Batteries (Optional)

- The clock time and alarm (if set) can be maintained during a power failure by 2 x AAA/ LR03 batteries (not supplied). Once the power is restored, check the time to make sure it is accurate and re-set if necessary.

Inserting The Batteries

- Open the battery compartment at the bottom of the unit by pressing on the catch and removing the cover.
- Insert 2 x AAA/ LR03 batteries (preferably alkaline batteries) into the battery compartment, following the polarity as shown on the diagram inside the compartment.
- Replace the battery compartment cover.

USB Charging

To charge, connect your USB device to the USB port of this clock.

NOTE:

- Use only with devices that require 5V USB power.
- The USB port provides 2,000mA recharging current. Devices requiring more than 2,000mA should not be used.
- Charging time may vary for different devices.

Setting The Clock

- While the radio is off, press and hold the **TIME SET** button for 2 seconds to activate time setting, the time will flash.
- Press the **HOUR** button to advance to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- Press the **MIN** button to advance to the correct minute.
- Press the **TIME SET** button again when the correct time is shown on the display or wait 8 seconds for the time to stop blinking. The clock will save and exit from time setting mode.

Setting The Alarm

- To set the alarm time, follow steps (1) to (4) in **SETTING THE CLOCK**, using **ALARM1/2** button, instead of the **TIME SET** button.

Using The Alarm Function

- Press the **ALARM 1/2** button to select beep or radio to wake to and the selected alarm mode will light up.
- The beep or radio will come on at the set time.
- To stop the alarm, press ***/FM/OFF** or **ALARM 1/2** button and the alarm will sound again the next day.
- To turn the alarm off completely, press the **ALARM 1/2** button until the alarm indicator has disappeared from the display.

NOTE: While the beep alarm volume is fixed and cannot be adjusted, the radio alarm volume can be adjusted to your desired level using the **VOLUME** buttons. To select a radio station to wake up to, see the section on "**LISTENING TO THE RADIO**".

Snooze Function

- Pressing the **SNOOZE** button when the wake-up alarm is sounding will cause the alarm to pause and the alarm will sound again in 9 minutes. This will happen each time the **SNOOZE** button is pressed.

Sleep Function

- With this function, you can listen to the radio up to 60 minutes, after which it will turn off automatically.
- When the radio is turned on, press the **SLEEP** button repeatedly to select the duration: 60, 45, 30, 15, 05 minutes or OFF.
 - At the end of the set time, the radio turns off automatically.
 - To cancel the sleep function before the end of the set time, press the and hold the **/FM/OFF** button for 2 seconds to turn off the radio immediately.

Listening To The Radio

- Press the **/FM/OFF** button to select the FM mode.
- Press and hold the **<TUNING>** buttons to start automatic tuning up/down. Release the button when the unit receives a station you would like to listen to. For manual fine-tuning, you can press it briefly to adjust the frequency step by step.
- Press the **VOLUME +/-** buttons to adjust the volume level.
- Press and hold the **/FM/OFF** button for two seconds to turn off the radio.

FOR OPTIMUM RECEPTION:

In FM mode, extend and position the FM antenna to achieve optimum reception.

Using Bluetooth Function

- Press the **/FM/OFF** button to enter Bluetooth mode and the Bluetooth indicator will flash. When pairing, remain within 3 feet of the unit.
- Using the native controls on your Bluetooth device, select the “**SPC729**” in your Bluetooth settings to pair.
- When successfully paired and connected, the Bluetooth indicator will light up and you will hear a chime.
- Use the native controls on the connected Bluetooth device to select a track.
- To play, skip or pause the track, use the native controls on the connected Bluetooth device.
- Audio played through the connected Bluetooth device will now be heard through the speakers.
- To adjust the volume, press the **VOLUME +/-** button on the alarm clock.

Care For Your Clock

- The batteries should be replaced if the display or alarm becomes weak or dysfunctional. Store the clock without batteries when not in use. A soft cloth or a paper towel may be used to clean your clock. Do not use any corrosive cleaner or chemical solution on the clock. Keep the clock clean and dry to avoid problems.

Digital Alarm Clock



This lightning flash and arrowhead within the triangle is a warning sign alerting you of “dangerous voltage” inside the product.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (ON BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

Please read this before operating your unit.

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Safety Instructions

1. Read these instructions - All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions - The safety and operating instructions should be retained for future reference.
3. Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions - All operating and use instructions should be followed.
5. Do not use this apparatus near water - The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings, Install in accordance with the manufacture's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip - over.



13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Please keep the unit in a good ventilation environment.
16. CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

WARNING: The mains plug is used as disconnect device, the disconnect device shall remain readily operable. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.

WARNING: All above markings were located on the external enclosure of the apparatus, except for label of Date Code was pasted inside the battery compartment. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: The battery shall not be exposed to excessive heat such as sunshine, fire or the like.